CCS Technical Documentation
NPD-1 Series Transceivers

Disassembly

©Nokia Corporation

ESD Protection

Step-by-Step Disassembly Instructions

1. Remove the battery cover.

1 Turn phone off.

2 Remove the B-cover by pushing the white button and pushing the cover up as shown above.

3 Remove the A-cover as shown.

4 Remove the battery.

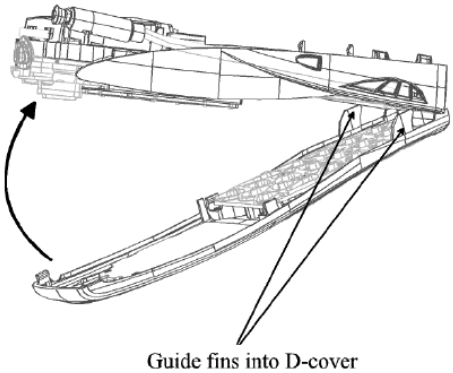

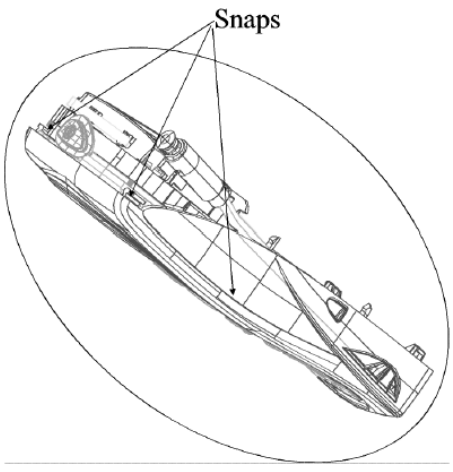

2. Remove the screws.

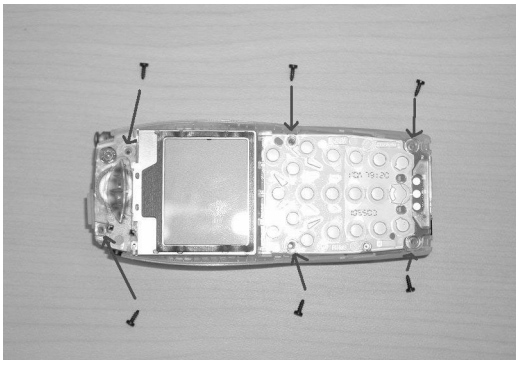

Remove the six screws using a nonconductive screwdriver.

3. Loosen the LCD assembly.

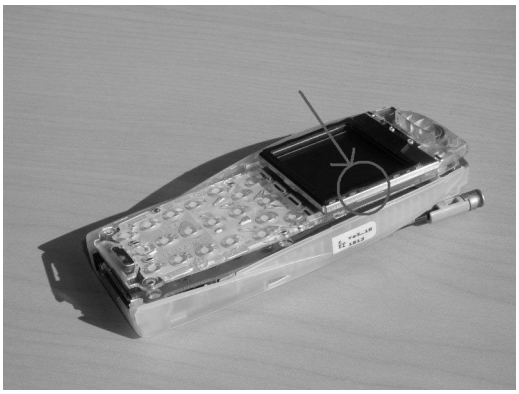

Insert a nonconductive tool on the side of the LCD and carefully snap the LCD assembly out from the D-cover.

4. Remove the LCD assembly.

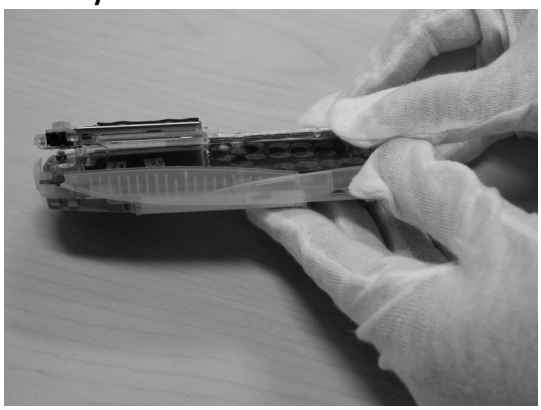

Note: Make sure that the LCD assembly is completely loose from the D-cover snaps to minimize the risk of bending the LCD board.

5. Separate the PWB from the D-cover assembly.

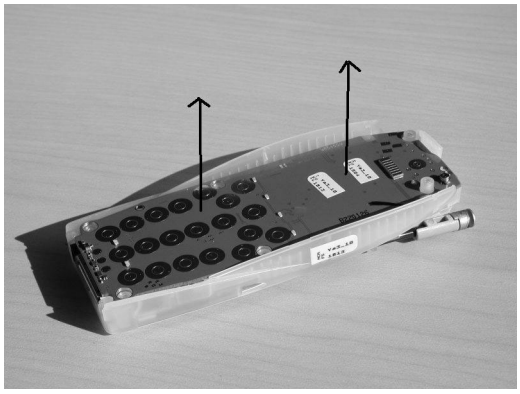

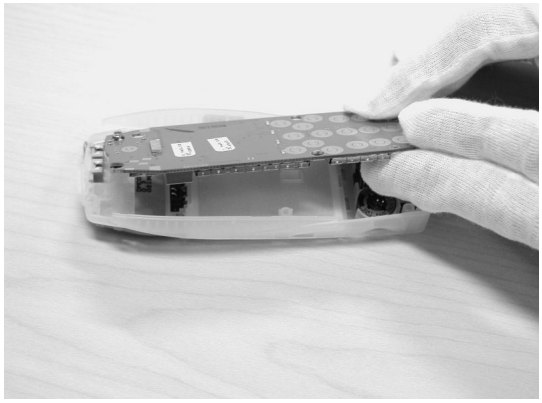

The PWB (shown at left) can be removed by lifting it up from the guide pins in the D-cover.

6. Antenna removal.

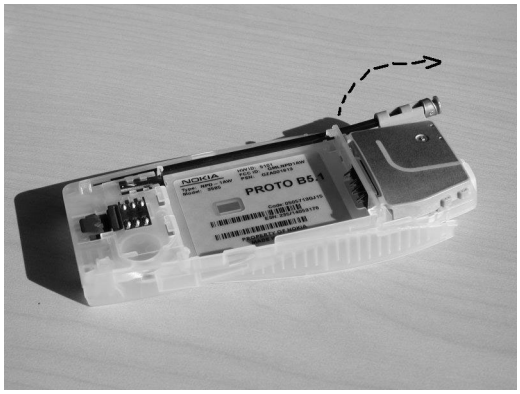

Antenna: Apply pressure with a nonconductive tool to snap the antenna out from the D-cover.

Note: The antenna should not be removed unless it has been verified as a faulty part. The antenna must be replaced after removal.

7. Remove remaining parts as needed.

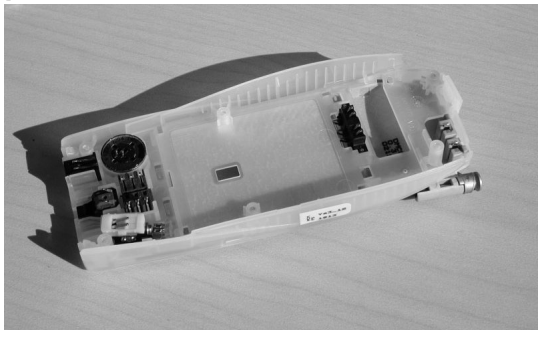

Other assembly items: You may lift out any additional assembly items, as required.

©Nokia Corporation Confidential